


How to Determine Hardware Handing

Hardware handing is always determined from the outside of the house, room, hallway, or closet. This is to ensure that the screws on the rosette and/or the interior locking mechanism (i.e. privacy pin, push button, entry turn piece) are visible from the inside only.

Example of Interior Side of Door:

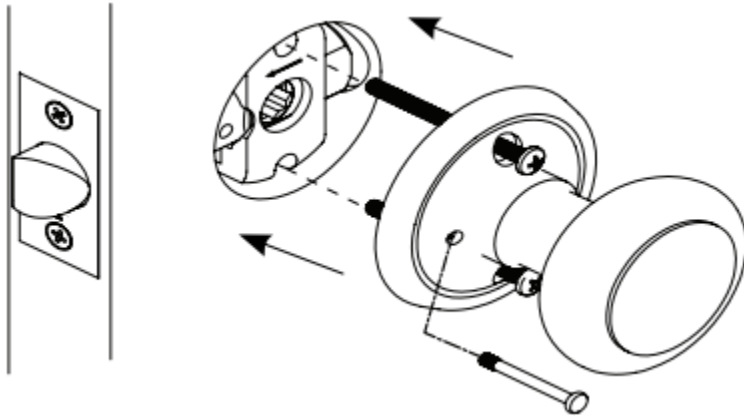

Specify hardware handing by standing on the outside of the house, room, hallway, or closet and note if the hinges are on the left or the right (it does not matter if the door swings in or swings out).

Examples of Hardware Handing:

Left Hand
Swing In
(Hinges are on
the left, door
opens inward)



Right Hand
Swing In
(Hinges are on
the right, door
opens inward)



Left Hand
Swing Out
(Hinges are on
the left, door
opens outward)



Right Hand
Swing Out
(Hinges are on
the right, door
opens outward)

